RadioShack
www.radioshack.com™

QUICK START

Digital Voice Recorder

ENGLISH
14-1188

Refer to your Owner's Manual for complete instructions.

1. Slide the battery compartment latch to the left. Then slide off the battery compartment cover and remove it.

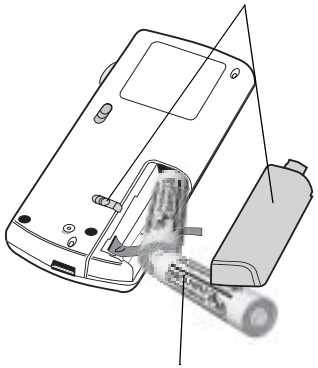

2. Place two AAA batteries (not supplied) over the ribbon into the compartment according to the polarity symbols (+ and –) marked inside.

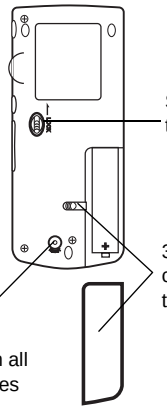

Slide **LOCK** to lock the control buttons.

3. Replace the cover and fasten the latch.

Press **RESET** to return all settings to default values

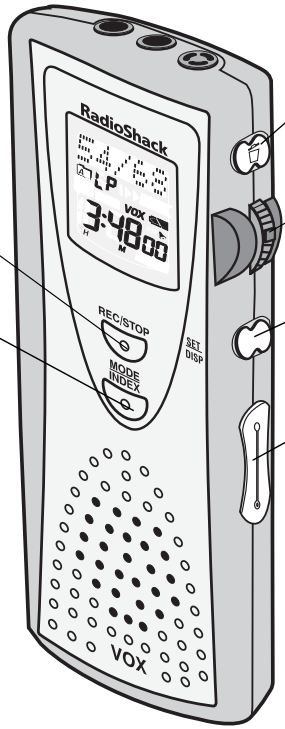

Press **REC/STOP** to start or stop recording.

Press **MODE/INDEX** to select the operation mode or to mark an index during recording or a section for repeating during playback.

Press 🗑 once to erase one message or hold down to erase all messages.

Press ◀◀ ■ ▶ ▶▶ to start or stop playback or to locate a message/index by skipping forward or backward.

Press **SET/DISP** to select information to be shown or enter various settings.

Press **VOL+/VOL–** to adjust the volume.

OPTIONAL ACCESSORIES

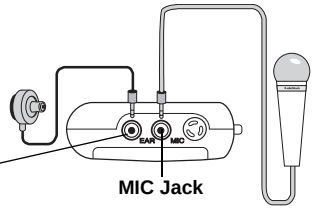

EAR Jack

MIC Jack

RadioShack Corporation
Fort Worth, Texas 76102

© 2002 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

08A02
Printed in China